

FR Clothing – Shirts | Coveralls | Pants

Sizing Charts

Performance FR Series DH Shirts and PolarTec® Knits

	S	M	L	XL	2X	3X	4X	5X	6X
Chest	36-38	40-42	44-46	48-50	52-54	56-58	60-62	64-66	68-70
Sleeve	35	36	36.5	37	38	39	40	41	42

Tall sizes MT-4XT add 2" to the standard sleeve length, 2" to the body.

FR Shirts

	S	M	L	XL	2X	3X	4X	5X	6X
Chest	36-38	40-42	44-46	48-50	52-54	56-58	60-62	64-66	68-70
Sleeve	34	34	35	36	37	38	39	40	41
Collar/Neck	17	18	19	21	22	23	25	26	27

FR Coveralls

	S	M	L	XL	2X	3X	4X	5X	6X
Chest	36-38	40-42	44-46	48-50	52-54	56-58	60-62	64-66	68-70
Inseam	30	30	30	30	30	30	30	30	30
Sleeve	33	34	35	36	37	38	39	40	41

Tall coveralls add 2" to the standard sleeve length, 2" to the inseam & 1" in the torso.

Short coveralls subtract 2" to the standard sleeve length, 2" in inseam & 1" in the torso.

If chest measurement falls between sizes, go up to next largest size.

FR Pants

	28	30	32	34	36	38	40	42	44	46	48	50
Waist												
Inseam (Un-hemmed)	37	37	37	37	37	37	37	37	37	37	37	37

Call for special/custom sizing

